



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1		Upper/Lower Housing Assembly	
1a	200692	OUT - grey hsgs/red switch -USA	1
1b	200693	OUT - grey hsgs/red switch - Canada	1
1c	200694	T-OUT - grey hsgs/red switch-USA	1
1d	200696	T-OUT - black hsgs/black switch-USA	1
1e	200697	OUT - black hsgs/blk swtch-Canada	1
1f	200698	T-OUT - grey hsgs/blk swtch-Canada	1
1g	200699	T-OUT - grey hsgs/black switch-USA	1
1h	200701	OUT - grey hsgs/black switch-USA	1
1i	200833	T-OUT LE - blk hsg/blk swtch-US/CAN	1
1j	201907	T-OUT- graphite hsgs/blk switch-US	1
2	S04527	Motor Assembly	1
3	201394	Tension Spring Assembly	1
4		Blade Assembly <b>[Sold Separately]</b>	
4a	04521	T-blade assembly - Standard	1
4b	04844	T-blade assembly - Deep Tooth	1
4c	200831	T-blade - Black Limited Edition	1
4d	04604	Square Blade	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
5		Cord Set	
5a	04624	2 Wire-UL	1
5b	04617	3-Wire-CSA	1
6		Blade Screws <b>[set of 2]</b>	
6a	201396	Blade Mount Screws - Grey	1
6b	201397	Blade Mount Screws - Black	1

**IMPORTANT INFORMATION**

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.