



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1		Lower Housing					
1a	201671	Lower Housing - Gray	1				
1b	201885	Lower Housing - Black	1				
2		Upper Housing/Switch Assembly					
2a	201938	Upper Hsg/Switch Assy - Gray	1				
2b	201939	Upper Hsg/Switch Assy - Black	1				
3		Accent					
3a	201673	Accent - Turquoise	1				
3b	201672	Accent - Lime Green	1				
3c	201888	Accent - Gray	1				
4		Drive Cap					
4a	201674	Drive Cap - Gray	1				
4b	201887	Drive Cap - Black	1				
5	22274	Front Housing Screw	2				
6	65834	Rear Housing Screw	2				
7	201573	Motor/Cam Assembly	1				
8	201435	Front Motor Mount	1				
9	21255	Motor Mount Screw	2				
10	S63897	Hinge Assembly	1				
11	64535	Lock Keeper	1				
12	201442	Hair Guard	1				
13	27864	Hinge Screw	2				
14	20658	Blade Drive	1				
15	15766	Blade Drive Screw	2				
16	201489	Main Circuit Board	1				
17	201443	Swivel Cord Circuit Board	1				
18	201441	Micro Switch Assembly	1				
19	79047	Micro Switch Assembly Screws	2				
20	201434	Hanger Hook	1				
21	201444	Cord/Adaptor	1				

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.