andis®

MODEL RBC CLIPPER
120 VOLT

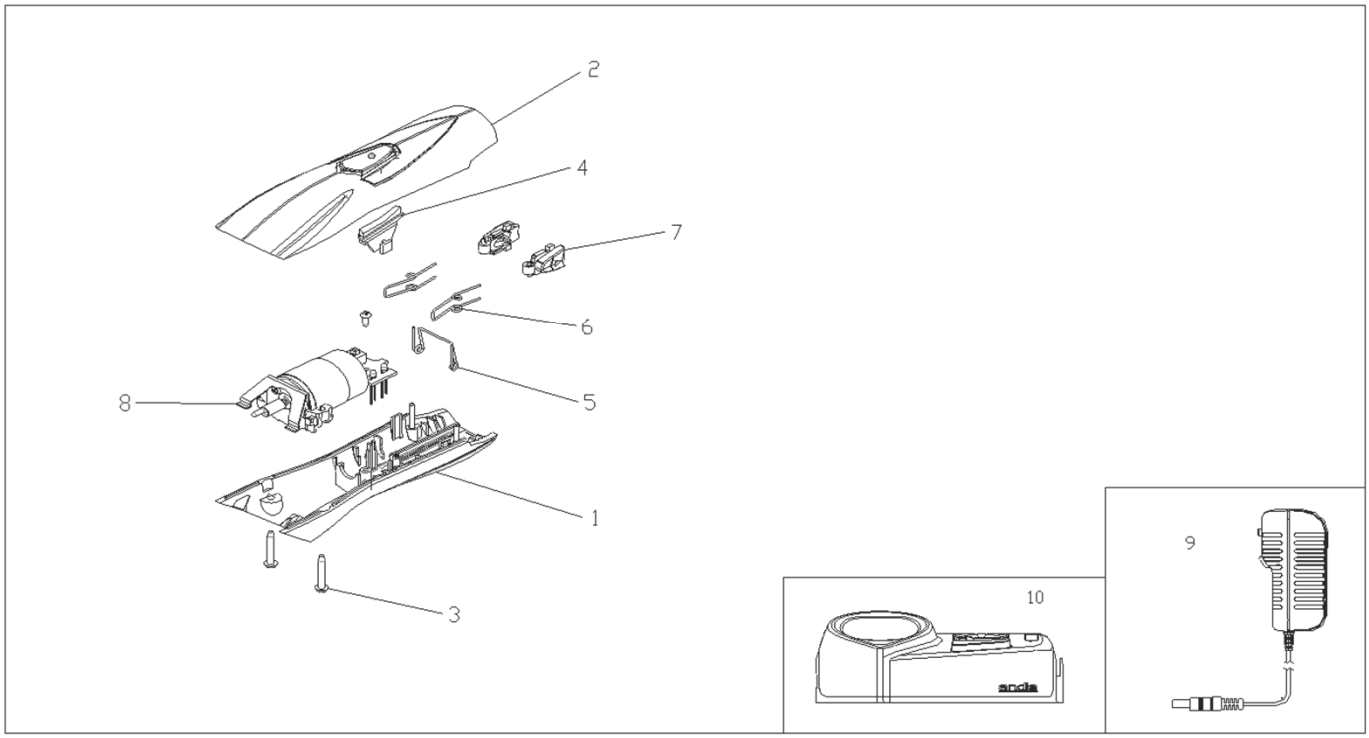

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1		Lower Housing	
1a	200002	Lower Housing-Meatllic Blue	1
1b	200004	Lower Housing-Metallic Red	1
1c	68341	Lower Housing-Metallic Purple	1
1d	68343	Lower Housing-Black	1
1e	68345	Lower Housing-Pink	1
1f	200091	Lower Hosuing-Lime Green	1
2		Upper Housing Assembly (Includes upper housing annd switch assembly)	
2a	200658	Upper Housing-MLT Red Pulse Ion	1
2b	200659	Upper Housing-Pink Pulse Ion	1
2c	200661	Upper Housin-Purple Pulse Ion	1
2d	200662	Upper housing-Black Pulse Ion	1
2e	200663	Upper Housing-MLT Blue Pulse Ion	1
2f	200664	Upper Housing - European Red	1
2g	200666	Upper Housing-BS Lime Grn Pulse Ion	1
2h	200667	Upper Housing - MLT Blue	1
2i	200668	Upper Housing Screws-MLT Purple Pulse Ion	1
2j	200669	Upper Housing Screws-Blk Pulse Ion	1
2k	200671	Upper Housing-Black	1
3	68259	Housing Screw	2
4	68254	Light Pipe	1
5	68176	Battery Eject Spring	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
6	68247	Battery Latch Spring	2
7	68248	Battery Latch	2
8	68332	Motor Assembly	1
9	68199	Wall Adaptor-Universal-for U.S.	1
10	200292	Charger Stand	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use, If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.