andis®

MODEL FHC CLIPPER
120 VOLT

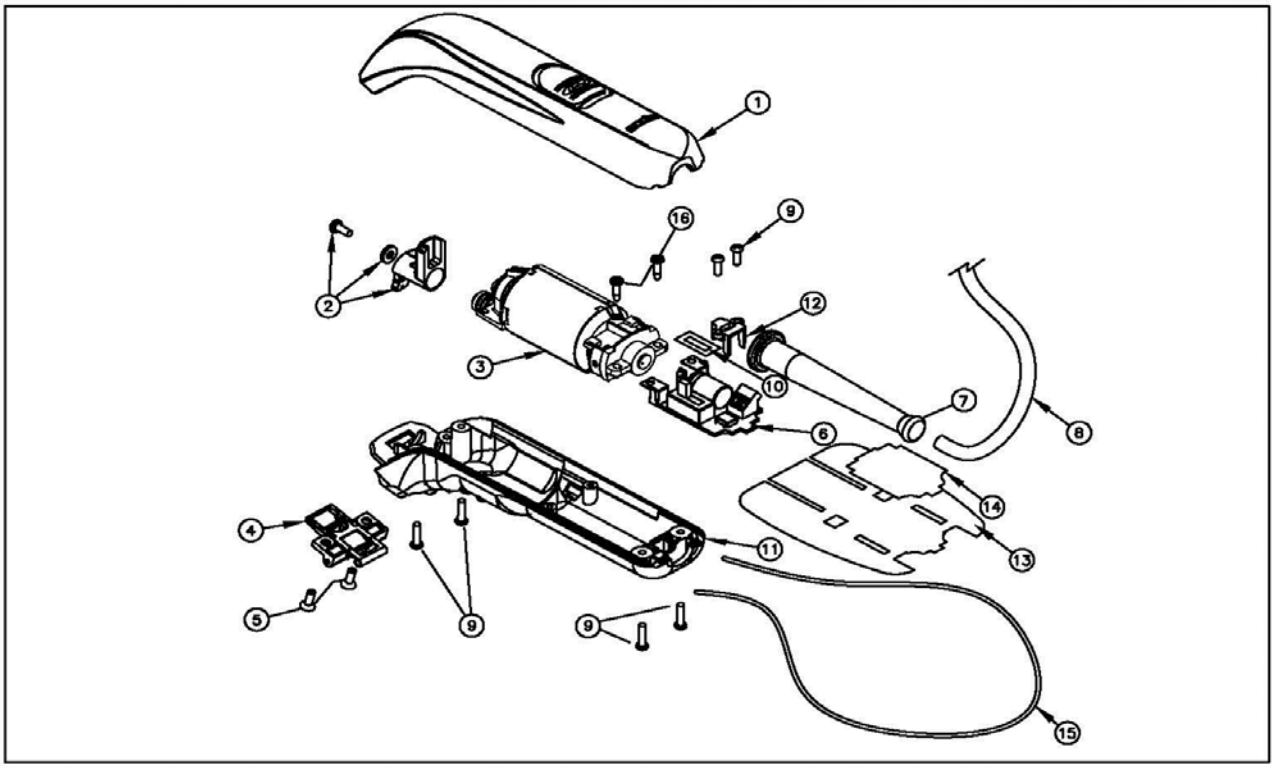

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1	200603	Upper Housing Assembly 120V	1
2	200599	Drive Finger/Washer/Screw Assy.	1
3	200604	Motor Assembly 120V	1
4	63897	Blade Mounting Bracket	1
5	27864	Screw (Blade Bracket)	2
6	22681	Circuit Board	1
7	65513	Strain Relief	1
8	65763	Cord	1
9	79029	Screw (Housing/Cord Clamp)	6
10	21063	Switch Insulator	1
11	78027	Lower Housing	1
12	200187	Cord Clamp	1
13	78041	Insulator Sheet	1
14	64965	Circuit Board Insulator	1
15	78029	Lanyard	1
16	65828	Screw (Rear Motor Frame)	2

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use, If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.