



SYSTEM INSTRUCTIONS USING THE SPACER BAR



STEP 1: Remove blade screws on your trimmer.
Keep original screws for new blade installation.



STEP 2: Place the Spacer Bar on the unit and hold in place with your fingers as shown, creating a U shape with the spacer bar.
Make sure the rounded edges of the bar are positioned on the bottom of the unit, as shown.



U-Shape facing UP




Rounded Edges DOWN



STEP 3: Using the original blade screws, attach the LYNC System M-Force blade on top of the spacer bar. Round edge of the spacer bar should match round edge of the blade.



Rounded Edges MATCH

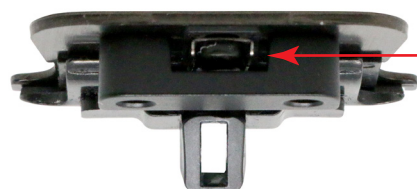

Make sure the spacer opening is positioned to allow room for the T-Guide, as shown.